


# Tow SAFE *with* TOWLOCK™

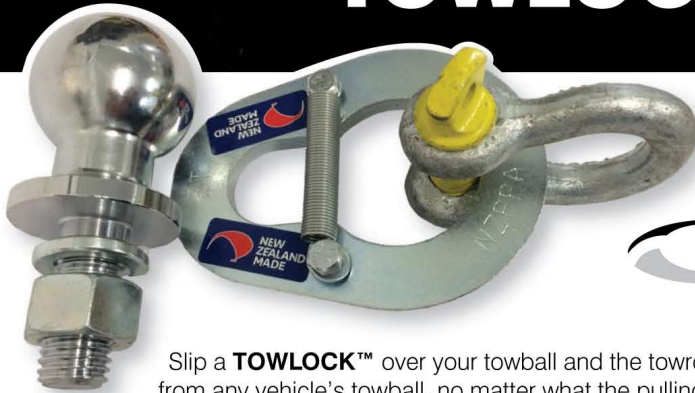

*Made in  
New Zealand by*

 **CARAC**  
GROUP

Slip a **TOWLOCK™** over your towball and the towrope will not slip off or jerk free from any vehicle's towball, no matter what the pulling angle of the towline is.

Will not jump off when tow line goes slack or when towing over bumpy ground.

Complies with lawful and safe towline connection requirements.

Easy to fit and to remove by hand. No tools are needed.

Patented \*\* design locks the **TOWLOCK™** device in place.

Simply hook or shackle towline/towrope/strop/steel cable to **TOWLOCK™**

---

Every towball needs a **TOWLOCK™**

---

- Private vehicle breakdowns and vehicle assists in mud, sand, snow, ice and floods
  - Commercial vehicles, rescue services and tow truck operators
- Emergency Services - Fire, Police Ambulance, Energy, Councils, Communications, Military, Doctors, Veterinarians etc
  - Farm Quads, ATV's, tractors and utes
    - Boat launching and retrievals
  - Off-roaders and recreational 4x4's

---

Connect Safely with **TOWLOCK™**

---

\***TOWLOCK™** fits to all 1<sup>7/8</sup> inch or 50mm towballs.

Four sizes of **TOWLOCK™** are available to align with the tow vehicle's safe towing weight abilities.  
Available **TOWLOCK™** sizes 1.5T, 2T, 3.2T and 4.5T



\*\*NZ Patent (Pending) No.730172

Made in New Zealand by Carac Couplings

P. 06 764 8254 | E. carac@xtra.co.nz  
53 Bridge Street. Eltham | [www.carac.nz](http://www.carac.nz)



# TOWLOCK™

## FITTING INSTRUCTIONS

### TO FIT A TOWLOCK™

1. Seat wider end over towball.
2. Position the spring at rear of towball.

**DO NOT OVER STRETCH THE SPRING**

3. Slide up neck and rotate.
4. Attach a D clip/tow rope clip to the large end of the **TOWLOCK™**

### TO REMOVE A TOWLOCK™

Push **TOWLOCK™** forward then lift the **TOWLOCK™** off the towball.



Made in New Zealand by  
 **CARAC**  
GROUP

P. 06 764 8254 | E. carac@xtra.co.nz  
53 Bridge Street, Eltham | [www.carac.nz](http://www.carac.nz)